

PEUGEOT **V33.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
106REMODEL AGE	Petrol engine	CDY BOSCH MA3.1	√	√	√				
		CDZ BOSCH MA3.1	√	√	√				
		HDY BOSCH MA3.1	√	√	√				
		HDZ BOSCH MA3.1	√	√	√				
		HFX BOSCH M7.4.4	√	√	√	√			
		KFX BOSCH MP7.3	√	√	√	√			
		KFX MM1AP	√	√	√	√			
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adaption	
		NFX MM1AP	√	√	√	√			
1007 VAN	Diesel engine	8HX SIEMENS SID804	√	√	√	√			
	ABS	ESP MK60	√	√	√	√			
	A/T	Controlled manual gearbox(BVMP)	√	√	√	√			
	Air bag	Airbag ECU	√	√	√	√			
		NFU BOSCH ME744	√	√	√	√	√	1.Marchting 2.Initialization Adaption	
		RFR MM48P	√	√	√	√	√		
		N6A BOSCH ME745	√	√	√	√	√	1.Marchting 2.Initialization Adaption 3.Program design/Mtich	
		NFU BOSCH ME745	√	√	√	√	√	1.Marchting 2.Initialization Adaption 3.Program design/Mtich	

PEUGEOT **V33.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
206	Petrol engine	N6A BOSCH ME744 FLEX FUEL	√	√	√	√	√		
		N6A BOSCH ME744	√	√	√	√	√	1.Marchting 2.Initialization Adapation	
		RFN MM48P	√	√	√	√	√	1.Initialization Adapation	
		KFX BOSCH MP7.3	√	√	√	√			
		KFX MM1AP	√	√	√	√			
		KFU MM6LP	√	√	√	√			
		HFZ MM1AP	√	√	√	√			
		HFY MM1AP	√	√	√	√			
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation	
		K6D SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation	
		K6C MM1AP	√	√	√	√			
		HFX MM4.8P	√	√	√	√	√		
		RFK MM6LP	√	√	√	√			
		RFN MM6LP	√	√	√	√			
	Diesel engine	WJY LUCAS DCN2	√	√	√	√			
		WJZ LUCAS DCN2	√	√	√	√			
		8HX BOSCH EDC16C3	√	√	√	√			
		9HZ BOSCH EDC16C3	√	√	√	√			
		RHY BOSCH EDC15C2	√	√	√	√			

PEUGEOT V33.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
	ABS	ABS MK70	√	√	√	√	√	1.Marchting 2.air bleed	
		ESP MK60	√	√	√	√			
		Anti-lock brakes TEVES (ABS BOSCH 5.3)	√	√	√	√	√	1.air bleed	
	A/T	AUTO Gearbox AL4	√	√	√	√	√	1.Marchting 2.Initialization Adaption 3.Accelebration pedal 4.Fuel consumption	
		ZF 4HP20 AT	√	√	√	√			
		Diesel fuel additive control unit	√	√	√	√	√		
		Electric pump unit(power steering)	√	√	√	√			
	IP	Instrument panel	√	√	√	√	√	1.Marchting	
		BSI	√	√	√	√	√	1.Initialization Adaption 2.key program	
	A/C	Air conditioning	√	√	√	√	√	1.Marchting	
		Alarm	√	√	√	√	√		
	Driver information	Display/Telematics	√	√	√	√	√	1.Marchting	
		on-board navigation system	√	√	√	√			
		Radio	√	√	√	√	√	1.Marchting	
		CD Player	√	√	√	√	√	1.Marchting	

PEUGEOT V33.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
		Switch unit under steering wheel(COM 2000)	√	√	√	√			
	Air bag	SAC-CENT-AUTOLIV-2	√	√	√			1.Marchting 2.lock and unlock	
	Air bag	Air bag and seat belt	√	√	√			1.Marchting	
	Left Air bag	Left side airbag	√	√	√			1.Marchting	
	Right Air bag	Right side airbag	√	√	√			1.Marchting	
	Petrol engine	N6A BOSCH ME7.4.5	√	√	√				
		N6B BOSCH ME7.4.5	√	√	√				
		NFU BOSCH ME7.4.5	√	√	√				
		KFU MM6LPC	√	√	√				
		5FW MEV17.4	√	√	√				
	Diesel engine	9HX BOSCH EDC16C3	√	√	√				
		9HZ BOSCH EDC16C3	√	√	√				
		Multiplexed additive adding pump ECU	√	√	√				
	ABS	ABS MK70.1	√	√	√				
		ESP MK60-O	√	√	√				
		Built-in systems interface(BSI)	√	√	√				
	Air bag	Airbag ECU	√	√	√				
	Drivina	Parking assistance	√	√	√				

PEUGEOT V33.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
207	Driving assistance/Comfort	Air conditioning	√	√	√				
		Under inflation detection	√	√	√				
		Power steering	√	√	√				
	Inform the driver/Audio/Communication	Muti-function display	√	√	√				
		Radio	√	√	√				
		CD player	√	√	√				
		Instrument panel	√	√	√				
		Steering wheel switching module	√	√	√				
		Telamatics	√	√	√				
		Warning light showing seat belt not fastened	√						
	Vehicle protection/Management of accesses	Alarm	√	√	√				
Visibility/Lighting /Signalling	Rain/Brightness sensor	√	√	√					
	Static AFS	√	√	√					
306	Petrol engine	HDY BOSCH MA3.1	√	√	√				
		KFX MM1AP	√	√	√	√			
		HDZ BOSCH MA3.1	√	√	√				
		RFS MM1AP	√	√	√	√			
	Air bag	Air bag and seat belt	√	√	√			1.Marchting	
		KFX BOSCH MP7.3	√	√	√	√			

PEUGEOT V33.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
306REMODEL AGE	Petrol engine	KFX MM1AP	√	√	√	√			
		KFX SAGEM SL96	√	√	√	√			
		LFY BOSCH MP7.3	√	√	√	√			
		LFY SAGEM SL96	√	√	√	√			
		NFT BOSCH M7.4.4	√	√	√	√			
		KFW SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation	
		K6D SAGEM S2000	√	√	√	√	√	1.Marchting 2.Initialization Adapation	
		NFV BOSCH M7.4.4	√	√	√	√			
		RFS MM1AP	√	√	√	√			
	Diesel engine	WJY LUCAS DCN2	√	√	√	√			
		WJZ LUCAS DCN2	√	√	√	√			
		RHY BOSCH EDC15C2	√	√	√	√			
	ABS	ABS BOSCH 5.3	√	√	√	√	√		
	A/T	AUTO Gearbox AL4	√	√	√	√	√	1.Marchting 2.Initialization Adapation 3.Accelebration pedal 4.Fuel consumption	
	Air bag	Air bag and seat belt	√	√	√			1.Marchting	
	Left Air bag	Left side airbag	√	√	√			1.Marchting	
Right Air bag	Right side airbag	√	√	√			1.Marchting		
		NFU BOSCH ME744	√	√	√	√	√	1.Marchting 2.Initialization Adapation	

PEUGEOT V33.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
307 VAN	Petrol engine	KFW SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption	
		K6D SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption	
		N6A BOSCH ME7.4.4	√	√	√	√	√	1.Marching 2.Initialization Adaption	
		RFN MM48P(Mechanical throttle housing)	√	√	√	√	√	1.Initialization Adaption	
		RFN MM4MP2(Motorised butterfly)	√	√	√	√			
		KFU MM6LP	√	√	√	√			
		RFK MM6LP	√	√	√	√			
		RFN MM6LP	√	√	√	√			
	Diesel engine	RHZ BOSCH EDC15C2	√	√	√	√			
		RHS BOSCH EDC15C2	√	√	√	√		1.Service	
		9HY BOSCH EDC16C3	√	√	√	√			
		RHY SIEMENS SID 801	√	√	√	√			
		RHY BOSCH EDC15C2	√	√	√	√			
		9HZ BOSCH EDC16C3	√	√	√	√			
		8HZ BOSCH EDC16C3	√	√	√	√			
	ABS	TEVES MK60 ABS	√	√	√	√			
		ABS BOSCH 8	√	√	√	√	√		
		ESP BOSCH 5.7	√	√	√	√	√		
		ABS BOSCH 5.3	√	√	√	√	√		

PEUGEOT V33.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
		ESP BOSCH 8	√	√	√	√			
	A/T	BVA AL4	√	√	√	√	√	1.Marchting 2.Fuel consumption	
		ZF 4HP20 AT	√	√	√	√			
	Air bag	SAC CENTRAL	√	√	√	√			
		SAC CENT SIEMENS	√	√	√			1.Marchting	
	Driver information	Display/Telematics	√	√	√	√	√		
		parking assistance	√	√	√	√			
		Radio	√	√	√	√	√		
		CD player	√	√	√	√			
		Switch unit under steering wheel(COM 2000)	√	√	√	√			
	switch control	Instrument panel	√	√	√	√	√		
		Driver's door module	√	√	√	√			
		Passenger door module	√	√	√	√			
		Diesel fuel additive control unit	√	√	√	√	√	1.Marchting	
		Electric pump unit(power steering)	√	√	√	√			
		Alarm	√	√	√	√	√		
		BSI	√	√	√	√	√	1.Marchting 2.key program	
	A/C	Air conditioning	√	√	√	√			
	Engines/automati	Engine ECU	√	√	√				

PEUGEOT V33.00 Diagnostics List (Note: For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
307 CAN	c gearbox	AT ECU	√	√	√				
	Active and passive safety	ABS8 BOSCH	√	√	√				
		ESP8 BOSCH	√	√	√				
		Airbag ECU	√	√	√				
	Driving assistance/Comfo	Parking assistance	√	√	√				
		Air conditioning	√	√	√				
	Inform the driver/Audio/Communication	Muti-function display	√	√	√	√			
		Radio	√	√	√	√			
		CD player	√	√	√				
		Instrument panel	√	√	√	√			
		Steering wheel switching m	√	√	√	√			
	Vehicle protection/Management of accesses	Telamatics	√	√	√				
		Alarm	√	√	√				
		Driver's door module	√	√	√				
		Passenger door module	√	√	√				
		Retractable roof	√	√	√				
	Visibility/Lighting/Signalling	Sun roof	√	√	√				
		Rain/Brightness sensor	√	√	√				
		Right headlamp beam corre	√	√	√				
		Left headlamp beam level c	√	√	√				
Driving school module		√	√						
Petrol engine	Steering wheel switching m	√	√	√	√				
	KFX SAGEM SL96	√	√	√	√				
	LFY BOSCH MP7.3	√	√	√	√				

PEUGEOT **V33.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
406	Petrol engine	LFX MM1AP	√	√	√	√			
		LFY SAGEM SL96	√	√	√	√			
	Diesel engine	RHZ BOSCH EDC15C2	√	√	√	√			
	ABS	ABS BOSCH 5.3	√	√	√	√	√		
	A/T	AUTO Gearbox AL4	√	√	√	√			
	Air bag	Air bag and seat belt	√	√	√			1.Marchting	
	Left Air bag	Left side airbag	√	√	√			1.Marchting	
	Right Air bag	Right side airbag	√	√	√			1.Marchting	
	Petrol engine	XFX BOSCH ME 746	√	√	√	√			
		LFX MM1AP	√	√	√	√			
		LFY SAGEM SL96	√	√	√	√			
		LFY BOSCH MP7.3	√	√	√	√			
		3FZ MM4MP2	√	√	√	√			
		RFN MM48P	√	√	√	√	√	1.Initialization Adaption	
		R6F MM48P	√	√	√	√			
		RFR MM48P	√	√	√	√	√		
		6FZ SAGEM S2000	√	√	√	√			
		RLZ SIEMENS IRIUS81	√	√	√	√			
	Diesel engine	RHY BOSCH EDC15C2	√	√	√	√			
		4HX BOSCH EDC15C2	√	√	√	√			
		RHY SIEMENS SID 801	√	√	√	√			
		RHS BOSCH EDC15C2	√	√	√	√		1.Service	
		RHZ BOSCH EDC15C2	√	√	√	√			
	ABS	ABS BOSCH 5.3	√	√	√	√	√		

PEUGEOT V33.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
406R		Alarm	√	√	√		√		
		BSI	√	√	√	√		1.key program	
		Rain/brightness sensor	√	√	√				
	A/C	Air conditioning	√	√	√	√			
	Driver information	Multi-function display	√	√	√	√	√		
		Radio	√	√	√	√	√		
		CD player	√	√	√	√			
		On-board navigation system	√	√	√	√			
		Switch unit under steering wheel(COM 2000)	√	√	√	√			
		Instrument panel	√	√	√	√	√		
	A/T	AUTO Gearbox AL4	√	√	√	√			
	Air bag	SAC-CENT-AUTOLIV-2	√	√	√				
	Air bag	Air bag and seat belt	√	√	√			1.Marchting	
Left Air bag	Left side airbag	√	√	√			1.Marchting		
Right Air bag	Right side airbag	√	√	√			1.Marchting		
Petrol engine	XFX BOSCH ME 746	√	√	√	√				
	LFX MM1AP	√	√	√	√				
	LFY SAGEM SL96	√	√	√	√				
	LFY BOSCH MP7.3	√	√	√	√				
	3FZ MM4MP2	√	√	√	√				
	RFN MM48P	√	√	√	√	√	1.Initialization Adaption		
	R6F MM48P	√	√	√	√				

PEUGEOT V33.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
406R COUPE		RFR MM48P	√	√	√	√	√		
		6FZ SAGEM S2000	√	√	√	√			
		RLZ SIEMENS IRIUS81	√	√	√	√			
	Diesel engine	RHY BOSCH EDC15C2	√	√	√	√			
		4HX BOSCH EDC15C2	√	√	√	√			
		RHY SIEMENS SID 801	√	√	√	√			
		RHS BOSCH EDC15C2	√	√	√	√		1.Service	
		RHZ BOSCH EDC15C2	√	√	√	√			
	ABS	ABS BOSCH 5.3	√	√	√	√	√		
		Alarm	√	√	√		√		
		BSI	√	√	√	√		1.key program	
		Rain/brightness sensor	√	√	√				
	A/C	Air conditioning	√	√	√	√			
	Driver information	Multi-function display	√	√	√	√	√		
		Radio	√	√	√	√	√		
		CD player	√	√	√	√			
		On-board navigation system	√	√	√	√			
		Switch unit under steering wheel(COM 2000)	√	√	√	√			
		Instrument panel	√	√	√	√	√		
	A/T	AUTO Gearbox AL4	√	√	√	√			
Air bag	SAC-CENT-AUTOLIV-2	√	√	√					
Air bag	Air bag and seat belt	√	√	√			1.Marching		

PEUGEOT **V33.00** Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
	Left Air bag	Left side airbag	√	√	√			1.Marchting	
	Right Air bag	Right side airbag	√	√	√			1.Marchting	
406 COUPE	Air bag	Air bag and seat belt	√	√	√			1.Marchting	
	Left Air bag	Left side airbag	√	√	√			1.Marchting	
	Right Air bag	Right side airbag	√	√	√			1.Marchting	
	A/T	AL4 autoadaptive automatic Gearbox	√	√	√	√			
	ABS	BOSCH ABS5.3	√	√	√	√			
407	Diesel engine	RHR SIEMENS SID803	√	√	√	√			
		RHL DCM3.4	√	√	√				
		RHR DCM3.4	√	√	√				
	Petrol engine	3FZ MM6LP	√	√	√	√			
		RFN MM6LP	√	√	√	√			
		Diesel fuel additive control unit	√	√	√				
	ABS	ESP EBC 440(KWP)	√	√	√	√			
	A/T	AL4 automatic gearbox	√	√	√	√	√	1.Marchting 2.Fuel consumption	
		Built-in systems interface(BSI)	√	√	√				
	Air bag	Airbag ECU	√	√	√	√			
	Inform the driver Audio/Communic	Muti-function display	√	√	√	√			
Radio		√	√	√	√				
CD player		√	√	√					

PEUGEOT V33.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
	ation	Instrument panel	√	√	√	√			
		Hands Free Kit	√	√	√				
	Vehicle protection Management of accesses	Alarm	√	√	√	√			
		Driver's door module	√	√	√	√			
		Passenger door module	√	√	√	√			
	Visibility Lighting/Signalling	Control unit windscreen wipers	√	√	√	√			
		Rain/Brightness sensor	√	√	√				
		Steering wheel switching module	√	√	√	√			
	Driving assistance/Comfo rt	Parking assistance	√	√	√				
		Air conditioning	√	√	√				
Under inflation detection		√	√	√					
Petrol engine	3FZ MM4MP2	√	√	√	√				
	RFN MM48P(Mechanical throttle housing)	√	√	√	√	√	1.Initialization Adaption		
	RFN MM4MP2(Motorised butterfly)	√	√	√	√				
	R6F MM4.8P	√	√	√	√				
	XFX BOSCH ME7.4.6	√	√	√	√				
Diesel engine	RHS BOSCH EDC15C2	√	√	√	√		1.Service		
	4HX BOSCH EDC15C2	√	√	√	√				
	RHZ BOSCH EDC15C2	√	√	√	√				
ABS	ABS BOSCH 5.3	√	√	√	√	√			

PEUGEOT V33.00 Diagnostics List (Note: For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
607 VAN	A/T	BVA ZF	√	√	√	√			
		ZF 4HP20 AT	√	√	√	√			
	Air bag	Air bag	√	√	√				
	Driver information	Multi-function display	√	√	√	√	√		
		Parking assistance	√	√	√	√	√		
		Instrument panel	√	√	√	√			
		CD player	√	√	√	√			
		Radio	√	√	√	√	√		
	switch control	Driver's door control panel	√	√	√	√			
		Passenger's door control panel	√	√	√	√			
	Visibility/Lighting	Headlamp height corrector	√	√	√	√	√		
		BSI	√	√	√	√	√	1.Initialization Adapation	
		storing of the driving position	√	√	√	√			
	Diesel fuel additive control unit	√	√	√	√	√	1.Marchting		
A/C	Air conditioning	√	√	√	√				
Petrol engine	3FZ MM6LP	√	√	√					
	4HP BOSCH EDC16CP39	√	√	√					
	4HR BOSCH EDC16CP39	√	√	√					
	4HS BOSCH EDC16CP39	√	√	√					
	4HT BOSCH EDC16CP39	√	√	√					
Diesel engine	4HP BOSCH EDC16CP39	√	√	√					
	4HR BOSCH EDC16CP39	√	√	√					
	4HS BOSCH EDC16CP39	√	√	√					
	4HT BOSCH EDC16CP39	√	√	√					

PEUGEOT V33.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions							
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others	
607 CAN		Diesel fuel additive control unit	√	√	√					
	ABS	ESP BOSCH8	√	√	√					
	Air bag	Airbag ECU	√	√	√					
		Built-in systems interface(BSI)	√	√	√					
	Driving assistance/Comfort		Parking assistance	√	√	√				
			Drivers seat memory unit	√	√	√				
			Air conditioning	√	√	√				
			Under inflation detection	√	√	√				
			Power steering	√	√	√				
	Inform the driver/Audio/Communication		Radio	√	√	√				
			CD player	√	√	√				
			Instrument panel	√	√	√				
			Steering wheel switching module	√	√	√				
			Hands Free Kit	√	√	√				
			Telamatics	√	√	√				
	Vehicle protection/Management of accessories		Alarm	√	√	√				
			Driver's door module	√	√	√				
			Passenger door module	√	√	√				
	Visibility/Lighting/Signalling		Rain/Brightness sensor	√	√	√				
		Petrol engine	R6F MM4.8P	√	√	√	√			

PEUGEOT V33.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
806	ABS	BOSCH ABS5.3	√	√	√	√			
	Air bag	Air bag and seat belt	√	√	√			1.Marching	
	Diesel engine	RHW BOSCH EDC15C2	√	√	√	√			
RHZ BOSCH EDC15C2		√	√	√	√				
	Diesel engine	RHW BOSCH EDC15C2	√	√	√	√			
		RHM BOSCH EDC15C2	√	√	√	√			
		RHT BOSCH EDC15C2	√	√	√	√			
		4HW BOSCH EDC15C2	√	√	√	√			
	ABS	ABR BOSCH 5.7	√	√	√	√			
		ESP BOSCH 5.7	√	√	√	√	√		
	Driver information	Display/Telematics	√	√	√	√	√		
		Warning light and odometer ECU	√	√	√	√			
		Parking assistance	√	√	√	√			
		CD player	√	√	√	√			
		Instrument panel	√	√	√	√	√		
		Switch unit under steering wheel(COM 2000)	√	√	√	√			
		radio/telematic receive control	√	√	√	√	√		
	Visibility/Lighting	Switch unit under steering wheel(COM 2000)	√	√	√	√			
		Right headlamp beam corrector	√	√	√	√			

PEUGEOT V33.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
807		Left headlamp beam level corrector	√	√	√	√			
	switch control	Driver's door module	√	√	√	√			
		Sliding side door	√	√	√	√			
		Passenger's door module	√	√	√	√			
	A/C	WEBASTO additional heating	√	√	√	√			
		Climate control	√	√	√	√			
	Air bag	Air bag	√	√	√	√			
		Diesel fuel additive control unit	√	√	√	√			
		Alarm	√	√	√	√	√		
		Storing of the driving position	√	√	√	√			
		BSI	√	√	√	√			
	Petrol engine	3FZ MM4MP2	√	√	√	√			
		3FZ MM6LP	√	√	√	√			
		RFN MM48P(Mechanical throttle housing)	√	√	√	√	√	1.Initialization Adaption	
		RFN MM4MP2(Motorised butterfly)	√	√	√	√			
		RFN MM6LP	√	√	√	√			
		XFW BOSCH ME746	√	√	√	√			
HDY BOSCH MA3.1		√	√	√					

PEUGEOT V33.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
PARTNER	Petrol engine	HDZ BOSCH MA3.1	√	√	√				
		HFX BOSCH M7.4.4	√	√	√	√			
		KFX BOSCH MP7.3	√	√	√	√			
		KFX MM1AP	√	√	√	√			
		KFX SGEAM SL96	√	√	√	√			
		LFX MM1AP	√	√	√	√			
		N6A BOSCH ME7.4.4	√	√	√	√	√	1.Marching 2.Initialization Adaption	
		KFW SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption	
		K6D SAGEM S2000	√	√	√	√	√	1.Marching 2.Initialization Adaption	
		NFU BOSCH ME7.4.4	√	√	√	√	√	1.Marching 2.Initialization Adaption	
		RFN MM6LP	√	√	√	√			
	Diesel engine	WJY LUCAS DCN2	√	√	√	√			
		RHY SIEMENS SID 801	√	√	√	√			
		RHY BOSCH EDC15C2	√	√	√	√			
		WJZ LUCAS DCN2	√	√	√	√			
	ABS	BOSCH ABS5.3	√	√	√	√			
	Driver information	Instrument panel	√	√	√	√			
		CD player	√	√	√	√			
		Radio PHILIPS	√	√	√	√			
		Radio CLARION	√	√	√	√			

PEUGEOT V33.00 Diagnostics List (Note:For reference only)

Vehicle	System	ECU type	Functions						
			System Info.	Read Dtc	Clear Dtc	Data stream	Actuation	Special Function	Others
		BSI	√	√	√	√		1.key program	
	A/C	WEBASTO additional heating	√	√	√	√			
	Air bag	Air bag and seat belt	√	√	√			1.Marchting	
		SAC CENT AUTOLIV	√	√	√				
EXPERT	Petrol engine	R6F MM4.8P	√	√	√	√			
		RFN MM4.8P	√	√	√	√	√		
	Diesel engine	WJY LUCAS DCN2	√	√	√	√			
		RHW BOSCH EDC15C2	√	√	√	√			
		RHX BOSCH EDC15C2	√	√	√	√			
		RHZ BOSCH EDC15C2	√	√	√	√			
	ABS	BOSCH ABS5.3	√	√	√	√			
	Air bag	Air bag and seat belt	√	√	√			1.Marchting	
BOXER	Petrol engine	MM48p 2L essence plombee	√	√	√	√			
		MM48p 2L dual fuel(LPG)	√	√	√	√			
		MM48p 2L One fuel petrol	√	√	√	√			

(*):Tested;

(?):Manual on website(www.x431.com)

Note: The final interpretation of the products belongs to LAUNCH TECH CO.,LTD.

CONNECTOR	X431	DIAGUN
SMART OBD	For all the cars except 307/607 can model cars after 2006 cars.	N/A
OBD 16C	For all the cars except 307/607 can model cars after 2006 cars.	N/A
CANBUS II	Just test 307/607 can model cars after 2006 cars. And need to add PEUGEOT/CITROEN-16 Converter connector.	N/A
diagun connector	N/A	For all the cars.
SUPER 16	For all the cars.	N/A