


**Hornby
DUBLO**

0-6-0 DIESEL SHUNTING LOCOMOTIVE 2-RAIL & 3-RAIL

No. 2231 2-RAIL AND No. 3231 3-RAIL

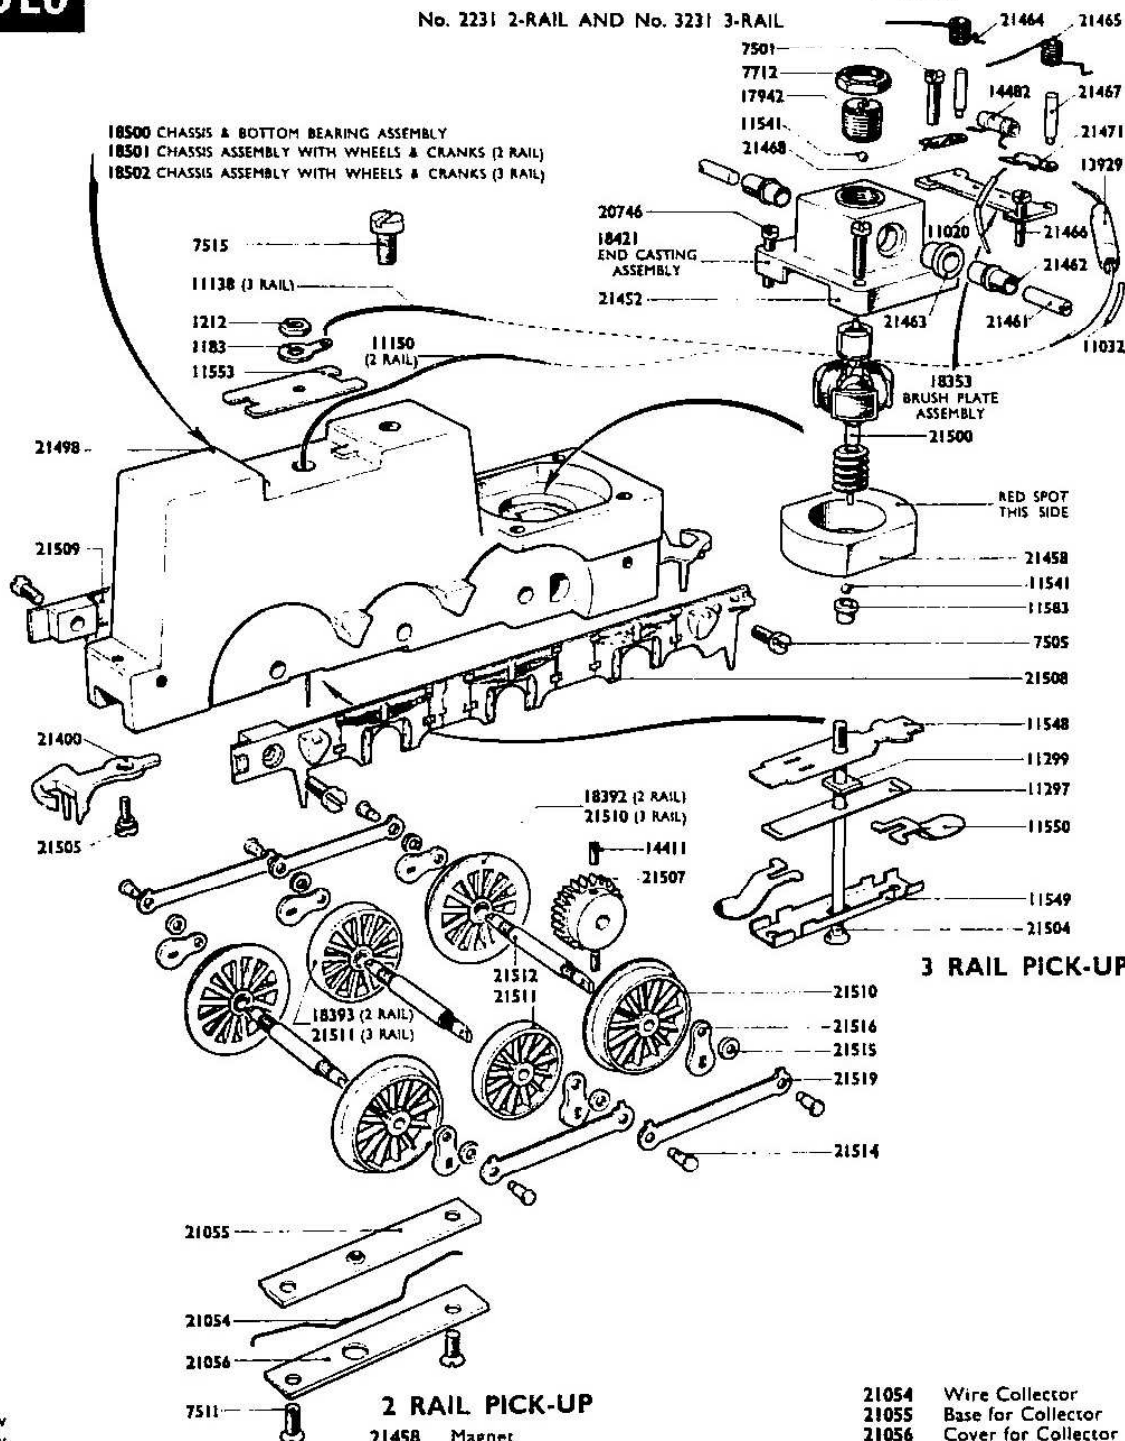

- 7501 Screw
- 7505 Screw
- 7515 Screw
- 7712 Locking Nut
- 11020 P.V.C. Sleeve
- 11032 P.V.C. Sleeve
- 11541 Ball Bearing
- 13929 Choke
- 14482 Condenser
- 18353 Spring Mounting Plate Assembly
- 11583 Bottom Bearing
- 21498 Chassis
- 17942 Adjustable Bearing
- 20690 Insulating Bush
- 21052 Wheel with Flange—Insulated
- 20690 Insulating Bush
- 21053 Wheel without Flange—Insulated
- 20746 Screw
- 21400 Coupling
- 21452 End Casting
- 21462 Brush Holder
- 21463

2 RAIL PICK-UP

- 21458 Magnet
- 21461 Brush
- 21464 Brush Spring L.H.
- 21465 Brush Spring R.H.
- 21466 Mounting Plate
- 21467 Spring Retaining Pin
- 21468 Contact Piece
- 21471 Soldering Tag
- 21500 Armature Shaft Assembly
- 21505 Shouldered Screw
- 21508 Sideframe L.H.
- 21509 Sideframe R.H.
- 21514 Coupling Rod Pin
- 21515 Washer
- 21516 Crank
- 21519 Dual Coupling Rod
- 2-RAIL
- 7511 Screw
- 11150 Connecting Wire
- 18392 Wheel with Flange (with insulating bush) Assembly
- 18393 Wheel without Flange (with insulating bush) Assembly
- 18502 Chassis, Dual Coupling Rods and Wheels

3 RAIL PICK-UP

- 21054 Wire Collector
- 21055 Base for Collector
- 21056 Cover for Collector
- ASSEMBLIES**
- 21051 Chassis Assembly Complete
- 21496 Housing Assembly
- 3-RAIL**
- 1183 Soldering Tag
- 1212 Nut
- 11138 Connecting Wire
- 11297 Collector Shoe Spring
- 11299 Distance Piece
- 14411 Grub Screw
- 18386 Coupling Rod & Crank Assembly
- 18500 Chassis & Bearing Assembly
- 21507 Worm Wheel
- 21510 Wheel with Flange
- 21511 Wheel without Flange
- 21512 Axle
- 11548 Insulator for Collector Shoe Holder
- 11549 Collector Shoe Holder
- 11550 Collector Shoe
- 11553 Insulator
- 21504 Screw
- ASSEMBLIES**
- 21496 Housing Assembly
- 21497

Chassis, Coupling Rods & Wheels Assembly Job No. 18502